

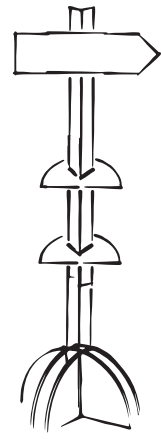


SIGNPOST (95 CM)

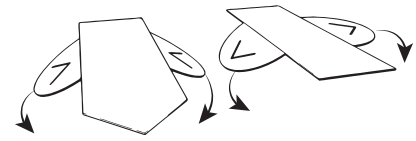


WHAT'S IN THE BOX?

- 2x Foot Under A
- 2x Feet above B
- 1x Angle Profile C
- 1-5x Arrow and/or sign E

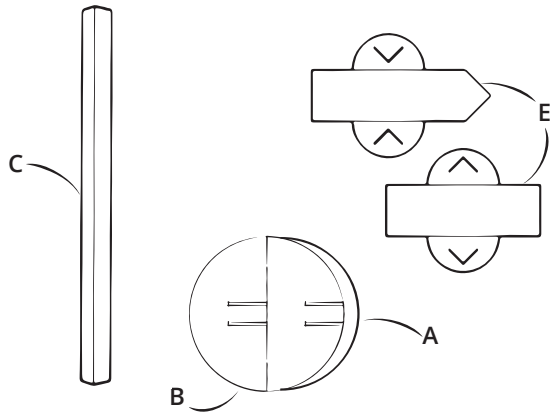


1. Check that you have all the parts Have.


2. Fold the flaps of the arrow and/or sign towards you

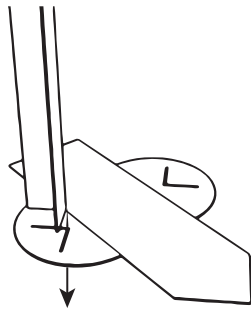


3. Fold the bottom part (plate or arrow) back again. Determine which side the arrow should point and insert the corner profile in the bottom part.

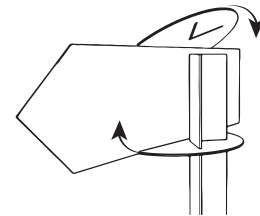

4. Fold the arrow and/or board over so that the top opening can be slid around the corner profile. Repeat for all arrows and/or signs.

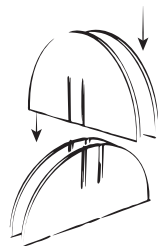


5. Take all parts A and B and slide them together so that it forms a dome.

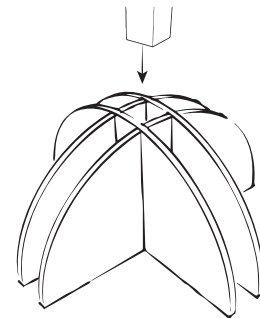



6. Now press the signpost into the base until it is fully inserted. The signpost is ready!

SIGNPOST (170 CM)

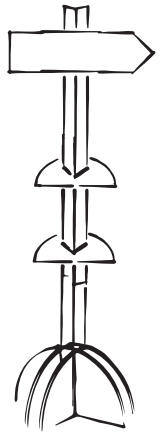

WHAT'S IN THE BOX?

- 2x Foot Under A
- 2x Feet above B
- 2x Angle Profile C
- 2x Connector D
- 1-5x Arrow and/or sign E

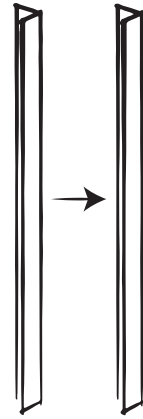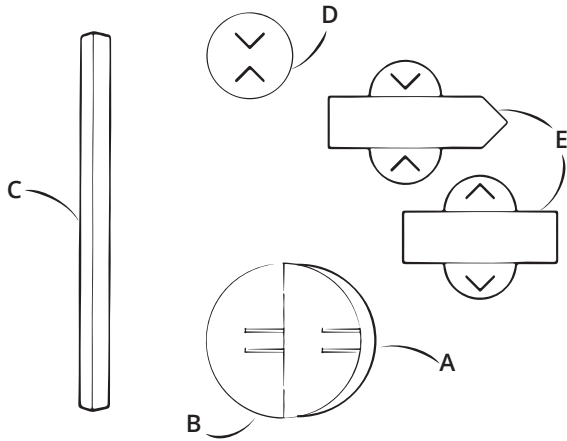

1. Check that you have all the parts
Have.

2. Hold both C-parts together

3. Slide the two connectors (D) onto part C from the top and bottom.

B x 2

4. Slide one of the corner profiles up to raise the signpost to the desired height.

Up to 170cm

5. Follow steps 2 to 6 of the signpost (95 cm) instructions. The signpost is ready!