


CUSTOM DRAWER

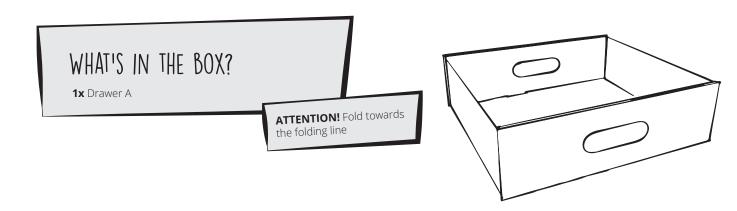


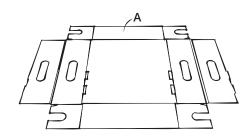


Make sure you have all the parts.

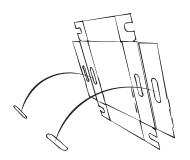


Break out the loose parts.



Carefully pre-fold all folding lines one time.

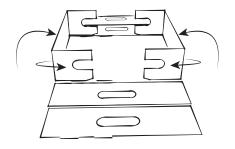

Fold the side walls 90° inwards.

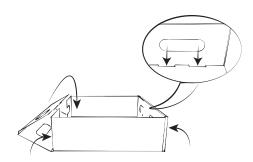

Fold the front and back walls inwards and clamp them into the recesses. The drawer is now finished!