
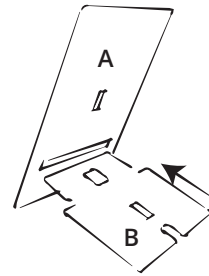
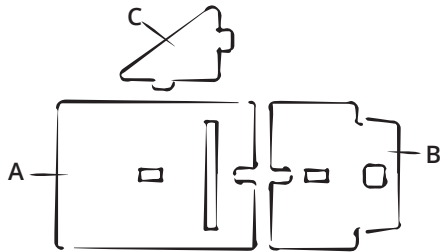


PHONE STAND



WHAT'S IN THE BOX?

- 1x Front A
- 1x Support B
- 1x Triangle C

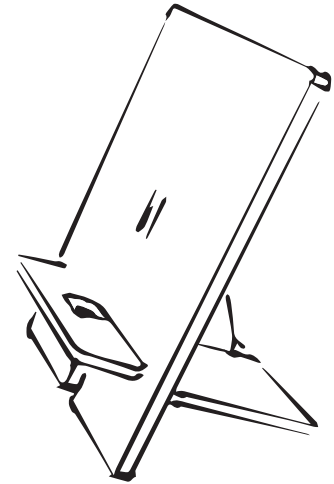

1. Check that you have all the parts.

2. Break out the loose parts. Next, slide front A and support B together.

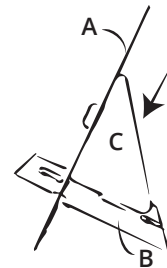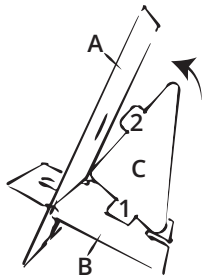

3. Slide bulge 1 of triangle C into the thinnest slot of support B.

4. Now press triangle C so that recess 1 is completely in the slot. When pressing, bulge 2 will slide into the hole of front A. The phone stand is now finished.