
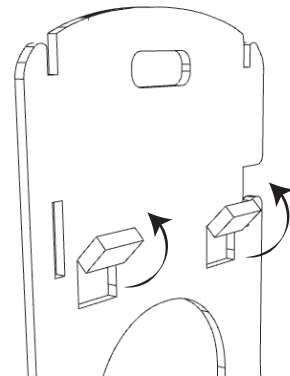
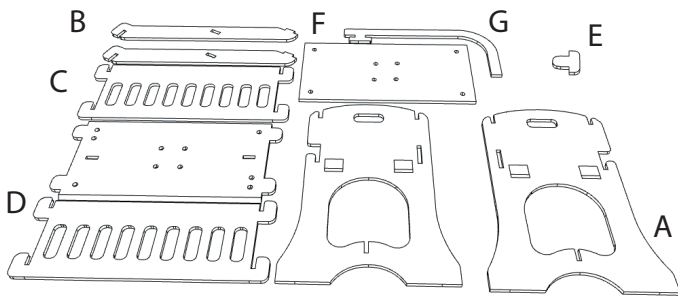


PAPERCRIB


WHAT'S IN THE BOX?

- 2x** A - Front-(or Back-)Side
- 2x** B- Crossbeam
- 1x** C - Sidepanel
- 1x** D - Side & Bottompanel
- 1x** E - T-shaped Wedge
- 1x** F - Base-plate
- 1x** G - Mobile-arm

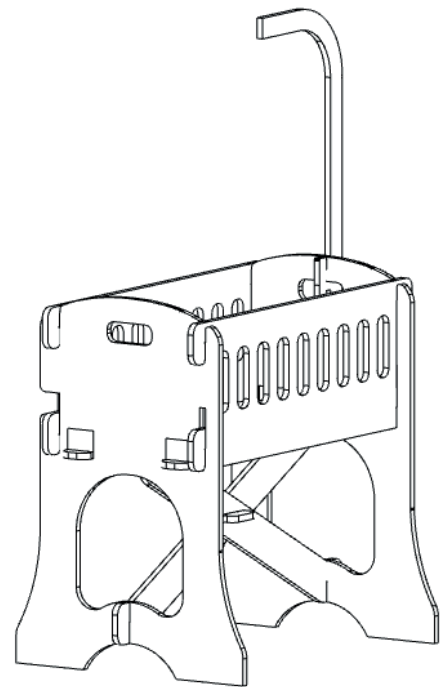


1. Remove the cardboard sheets from the packaging & put all the parts in an orderly manner on the ground! Please note that the T-shaped wedge (E) is also a component.


2. Take the first part: the front/back side(A) and fold the two flaps all the way up as shown in the illustration. You can only push the lids in one direction, so don't force them in the wrong direction.

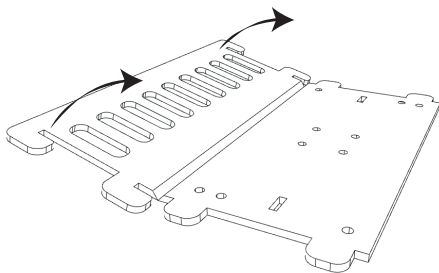


3. Grab the side/bottom part(D) and fold it to an L shaped profile.

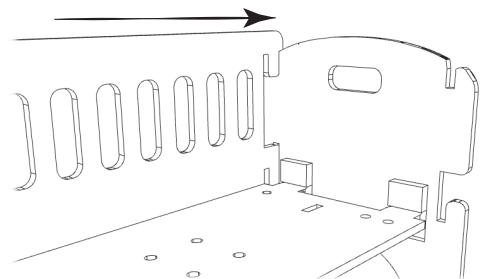


4. Now slide the side/bottom part (D) into the front/back side (A). This will only fit if you have pushed the flaps all the way up.

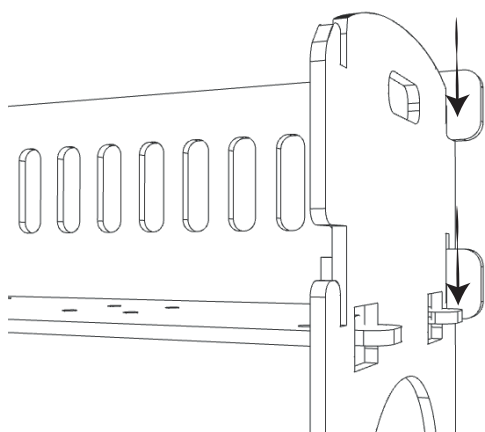


5. Press the bottom/side panel (D) downwards into (A). The side now connects nicely to the top and there will be space to press the flaps back to the closed position.

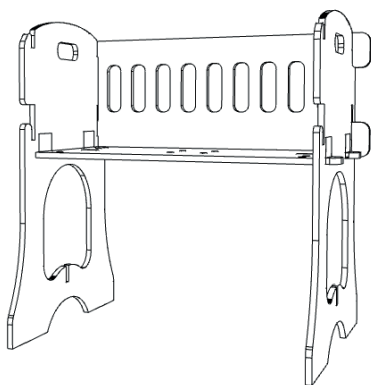


7. Now repeat the actions on the other side. Take care not to push the flaps in the wrong direction. If you feel counter-pressure, do not push any further. Also make sure that the flaps are folded all the way up, otherwise the whole thing will not fit in elkaar.

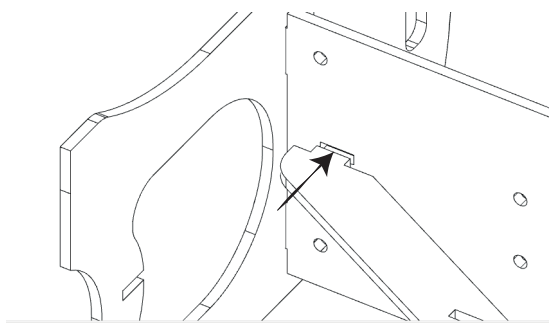


9. Slide the other side of the crossbeam (A) through the underside of the cradle (D) to secure the crossbeam.

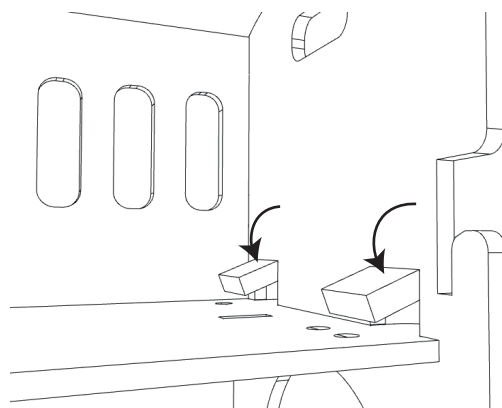


6. Now close both flaps on the front/backside (A). Apply pressure gently. If you feel counter-pressure, do not push any further.

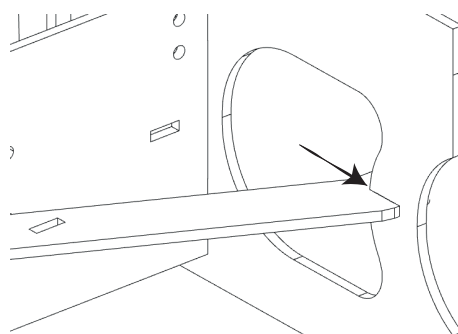


8. Put the cradle on its side and grab the cross beams (B). Place the crossbeam in the cut-out in the front or back of the cradle (A).

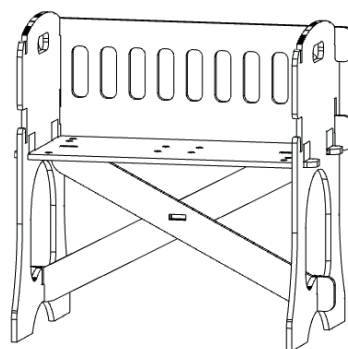


10. Repeat these actions on the opposite side of the cradle. If done correctly, there is a small opening in the middle of the two crossbars!

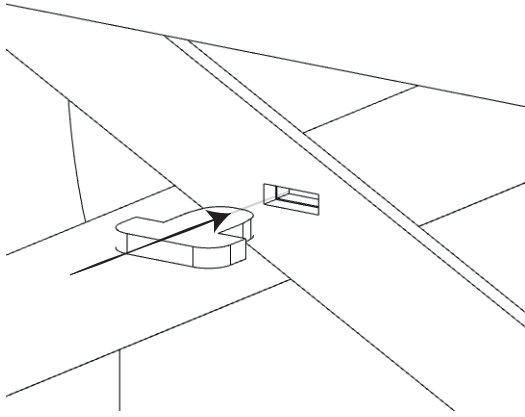


11. Grab the T-shaped wedge (F) and slide it exactly into the Slot so that both crossbars (B) are attached to each other.

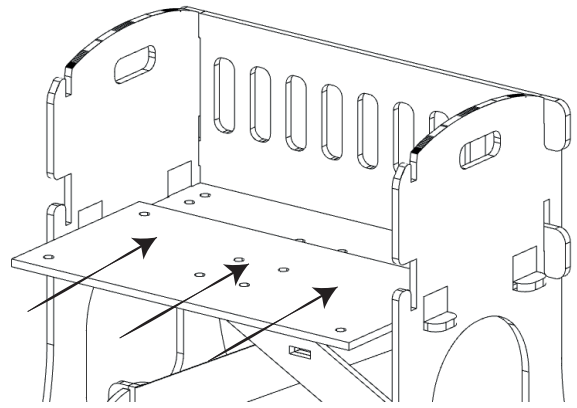


12. Take the base plate (E) and read the warnings once again. As soon as you have done this you can slide the base plate (E) on top the cradle!

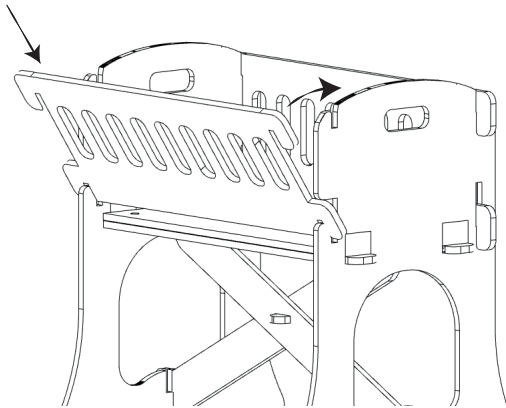

13. Lift the side wall (C) at an angle and tilt it until it sits above the cutouts in the front and backside (A) of the cradle.

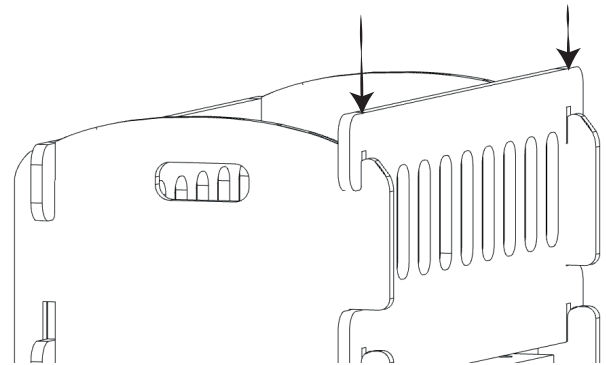

14. Now push the sidepanel (C) downwards. The cradle is now almost complete.

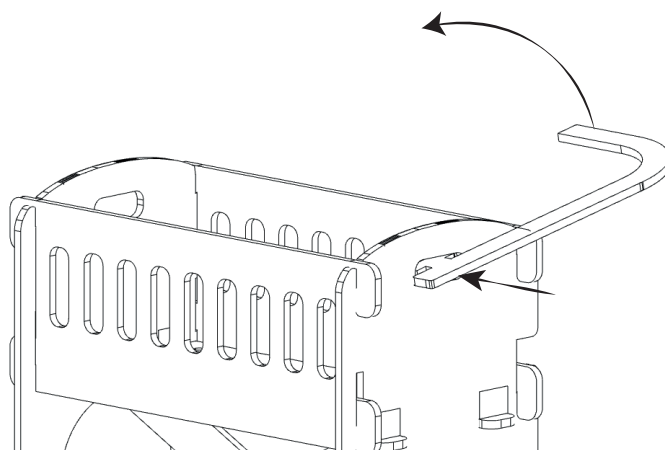

15. As a final step, we are going to install the mobile. Insert the Mobile arm (G) sideways into either of the handles on front or backside (A) and turn it until it engages in the handle! The papercrib is now completely ready!